


WIRING DIAGRAM

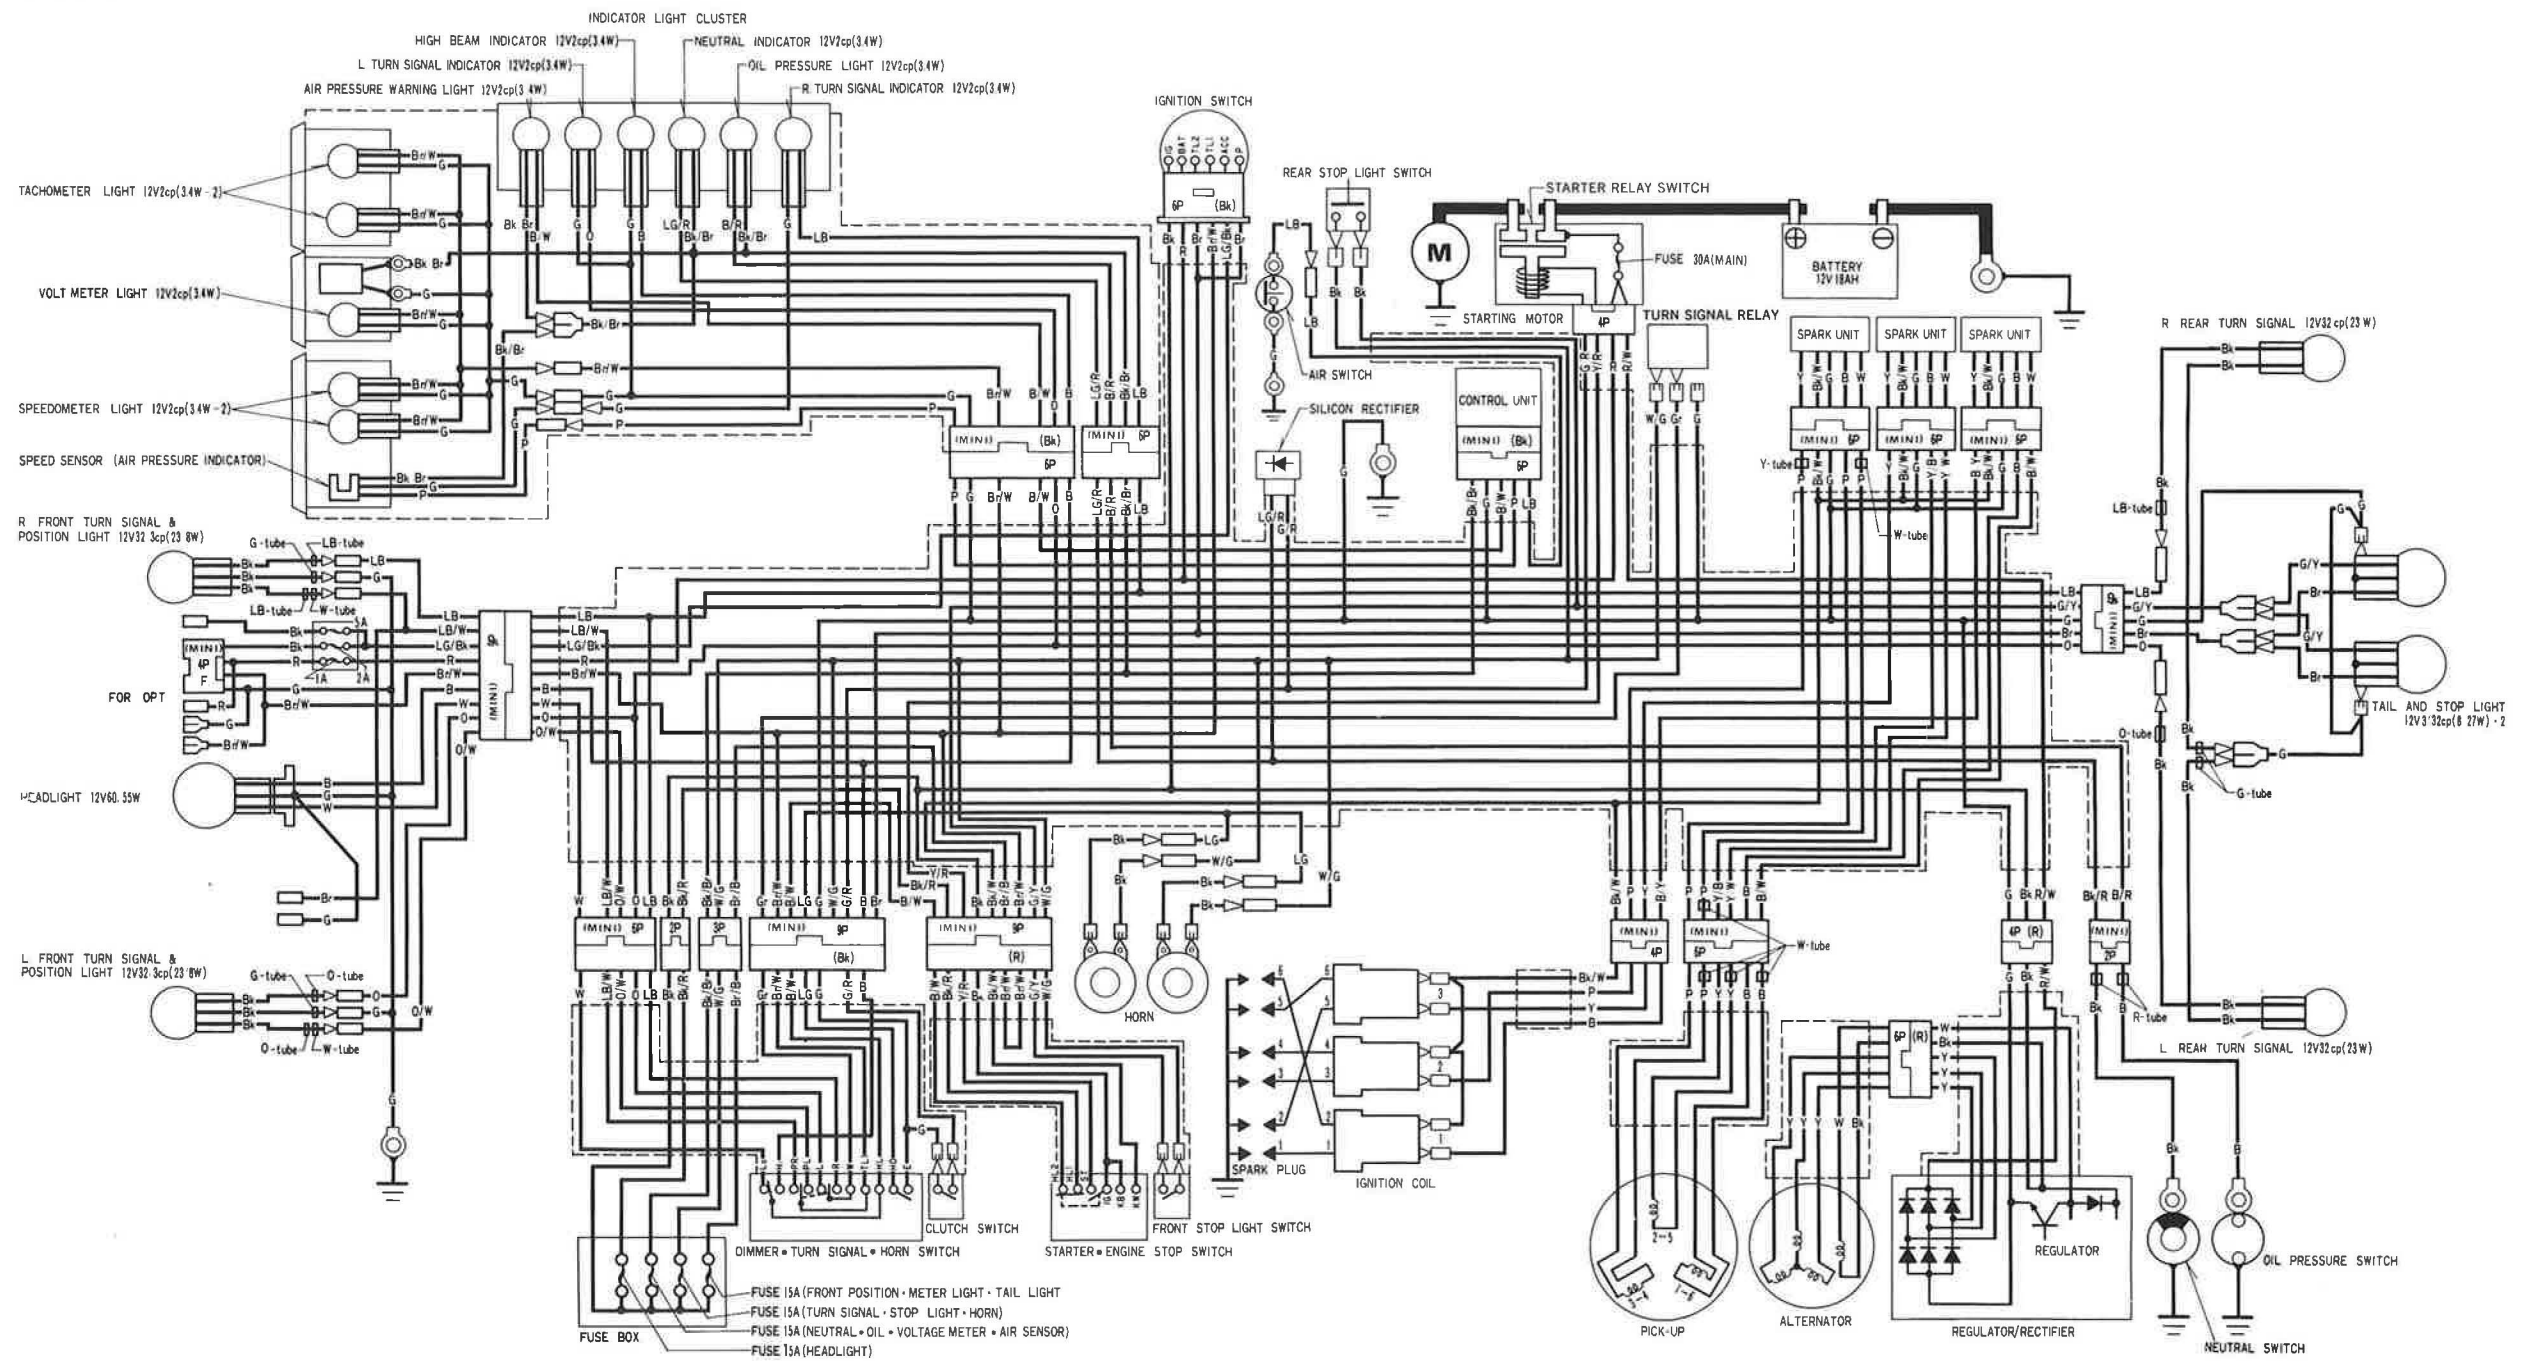

SWITCH CONTINUITY

| IGNITION SWITCH | | | | | | |
|-----------------|-----|----|-------|-----|-----|-----|
| | BAT | IG | ACC | TL1 | TL2 | P |
| OFF | | | | | | |
| ACC | | | | | | |
| ON | | | | | | |
| P | | | | | | |
| COLOR | R | Bk | LG/Bk | B/W | B/W | B/W |

| STARTER SWITCH | | | | |
|----------------|------|-----|----|-----|
| | HL1 | HL2 | IG | ST |
| FREE | | | | |
| PUSH | | | | |
| COLOR | Bk/R | B/W | Bk | Y/R |

| ENGINE STOP SWITCH | |
|--------------------|---------|
| | KB KW |
| OFF | |
| RUN | |
| OFF | |
| COLOR | Bk Bk/W |

| TURN SIGNAL SWITCH | | | | | | |
|--------------------|----|----|---|-----|------|-----|
| | R | W | R | L | P | PR |
| R | | | | | | |
| N | | | | | | |
| L | | | | | | |
| COLOR | Gr | LB | O | B/W | LB/W | O/W |



| DIMMER SWITCH | | | |
|---------------|-----|----|----|
| | HL | Lo | Hi |
| Lo | | | |
| (N) | | | |
| Hi | | | |
| COLOR | B/W | W | B |

| HORN SWITCH | |
|-------------|------|
| | HO E |
| FREE | |
| PUSH | |
| COLOR | LG G |


| | | | |
|----|-------------|----|------------|
| Br | Brown | Y | Yellow |
| Bk | Black | B | Blue |
| W | White | Gr | Grey |
| LG | Light Green | LB | Light Blue |
| R | Red | O | Orange |
| G | Green | P | Pink |

0030Z-MA2-6700

CABLE & HARNESS ROUTING

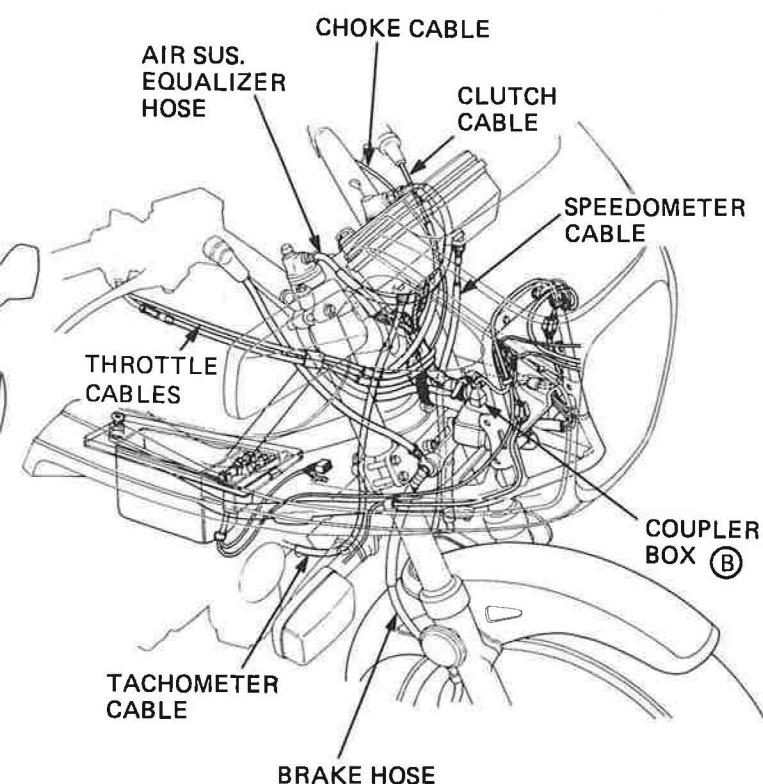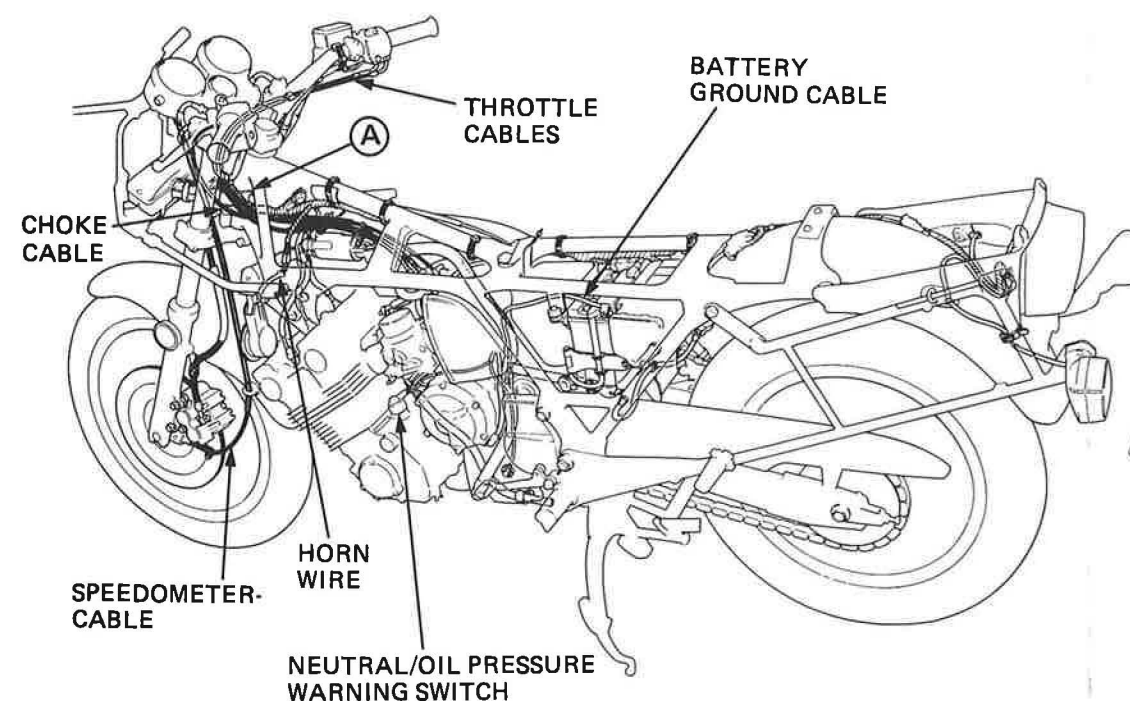

DETAIL (B)

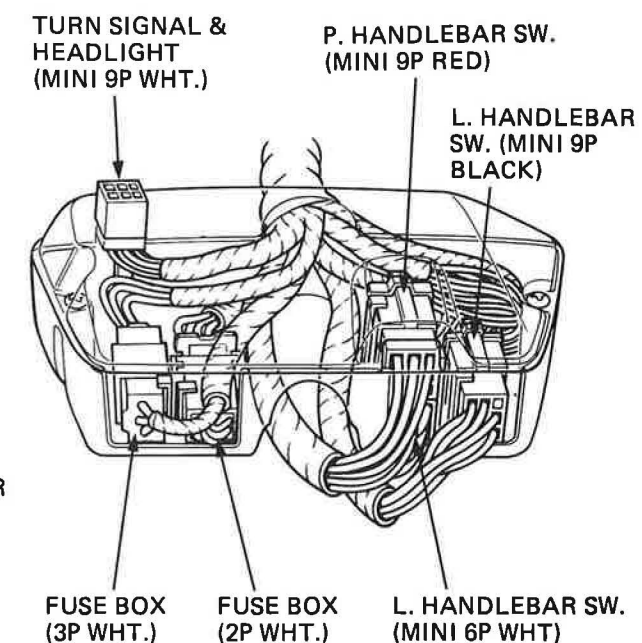

DETAIL (A)

